



Mount for Blaser

Mount Adjustment:

The locking lever should close easily but should exert some pressure onto the mount location lugs in the barrel. If your mount is too tight or too loose you will need to adjust it with the wrenches supplied in the box.

1. Slacken Lock Screw
2. Turn adjusting screw clockwise to tighten / anti-clockwise to loosen
3. Tighten Lock Screw

